

FIG. 23

177



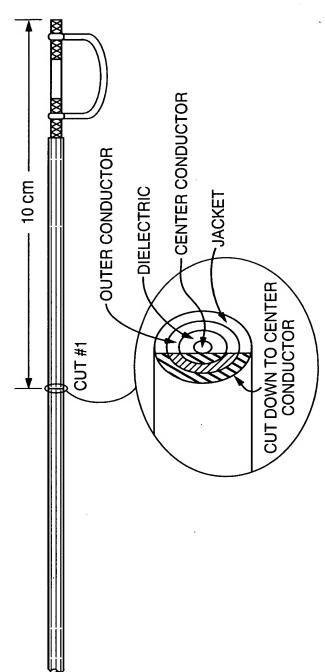


FIG. 24A

Ţ.

1090 3) PERPENDICULAR CUT AT END OF CUT #2 — OPEN CABLE TO CENTER CONDUCTOR LIKE A BOOK. 4) LONGITUDINAL CUT FROM CUT #3 TOWARD SOURCE 1 CM. 2) LONGITUDINAL CUT FROM CUT #1 TOWARD SOURCE 1 CM. DOWN TO CENTER CONDUCTOR. CENTER CUT #1 → 1 cm → + 1 cm + FIG. 24B

5) PERPENDICULAR CUT AT END OF CUT #4 — OPEN CABLE TO CENTER CONDUCTOR LIKE A BOOK.






FIG. 24C

1100,


6) LONGITUDINAL CUT FROM CUT #5 TOWARD SOURCE 1 CM.



7) PERPENDICULAR CUT AT END OF CUT #6 — OPEN CABLE TO CENTER CONDUCTOR LIKE A BOOK.



8) LONGITUDINAL CUT FROM CUT #7 TOWARD SOURCE 1 CM.



9) PERPENDICULAR CUT AT END OF CUT #8 — OPEN CABLE TO CENTER CONDUCTOR LIKE A BOOK.




FIG. 24D

